

Copyright © 2014 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H50-111CC, H50-112CC

EZ™ CARRY POUCH MOUNTING

FOR HONDA GOLDWING GL1800, 2001-2010

4/7/2014

TOOLS NEEDED: DRILL

5/16" (8MM) DRILL BIT

KNIFE


RUBBING ALCOHOL

LINT FREE RAG

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

**INSTALLATION:**

1. PLACE BIKE ON CENTER STAND.
2. OPEN FUEL ACCESS DOOR.
3. USE A DRILL AND A 5/16" BIT. DRILL A HOLE THROUGH THE INSIDE SIDE WALL AS SHOWN IN FIG. 1. *NOTE: BE CAREFUL TO ONLY GO THROUGH THE FIRST LAYER.*
4. REMOVE ANY BURRS OR SHARP EDGES.
5. INSTALL SUPPLIED RIVET THROUGH THE POUCH MOUNT AND INTO THE HOLE YOU JUST DRILLED. SEE FIG. 2.
6. PULL THE MOUNT TIGHT DOWN THE SIDE OF THE SHELTER TO SEE WHERE TO MOUNT THE HOOK STRIP.
7. CLEAN THE AREA WITH RUBBING ALCOHOL AND A LINT FREE RAG. LET DRY.
8. REMOVE BACKING FROM HOOK STRIP. PULL MOUNT TIGHT AND FASTEN TO THE SHELTER OF THE BIKE. *NOTE: LET TAPE CURE OVERNIGHT BEFORE USING.*
9. ATTACH POUCH TO MOUNT.

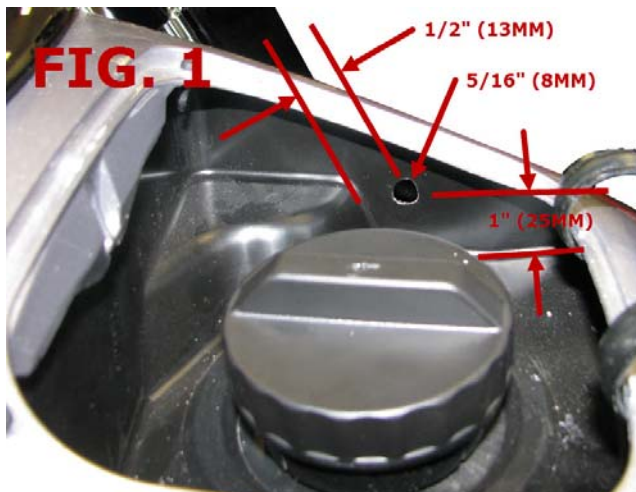

Scan code with  
your smartphone  
to view video

